Publication Part No. 1F8483

14 AUG 03

INSTALLATION INSTRUCTIONS

for the

LIGHT LEAK KIT

for the

***Kodak X-Omat* 5000RA PROCESSOR**

Service Code: 3425

Important

Qualified service personnel must install this equipment.

HEALTH IMAGING

Confidential, Restricted Information
©Eastman Kodak Company 2003

PLEASE NOTE: The information contained herein is based on the experience and knowledge relating to the subject matter gained by Eastman Kodak Company prior to publication.

No patent license is granted by this information.

Eastman Kodak Company reserves the right to change this information with out notice, and makes no warranty, express or implied, with respect to this information. Kodak shall not be liable for any loss or damage, including consequential or special damages, resulting from any use of this information, even if loss or damage is caused by Kodak's negligence or other fault

Installation

Purpose

If the 5000RA Processor is placed in a area of direct sunlight or strong room light, light may leak into the processor and fog film. Installation of the LIGHT LEAK KIT will prevent film fogging.
The LIGHT LEAK KIT, P/N 1F8481 is available from Service Parts Management.

Parts Included in the LIGHT LEAK KIT, P/N 1F8481

Part Number	Description	Qty.
1F8482	TOP COVER – BLACK (underside painted)	1
7C8237	BAFFLE # 1 – NON DRIVE SIDE, ENTRANCE	1
7C8231	BAFFLE # 2 – DRIVE SIDE, ENTRANCE	1
1F8292	BAFFLE # 3 – NON DRIVE SIDE, EXIT	1
1F8291	BAFFLE # 4 – DRIVE SIDE, EXIT	1
852774	SCREW	1
1F8483	Installation Instructions	1

Installing the LIGHT LEAK KIT

1. De-energize and disconnect the main power from the PROCESSOR.
2. Remove:
   3. TOP COVER
   4. DRIVE SIDE PANEL
   5. NON-DRIVE SIDE PANEL
   6. SQUEEGEE CROSS-OVER ASSEMBLY

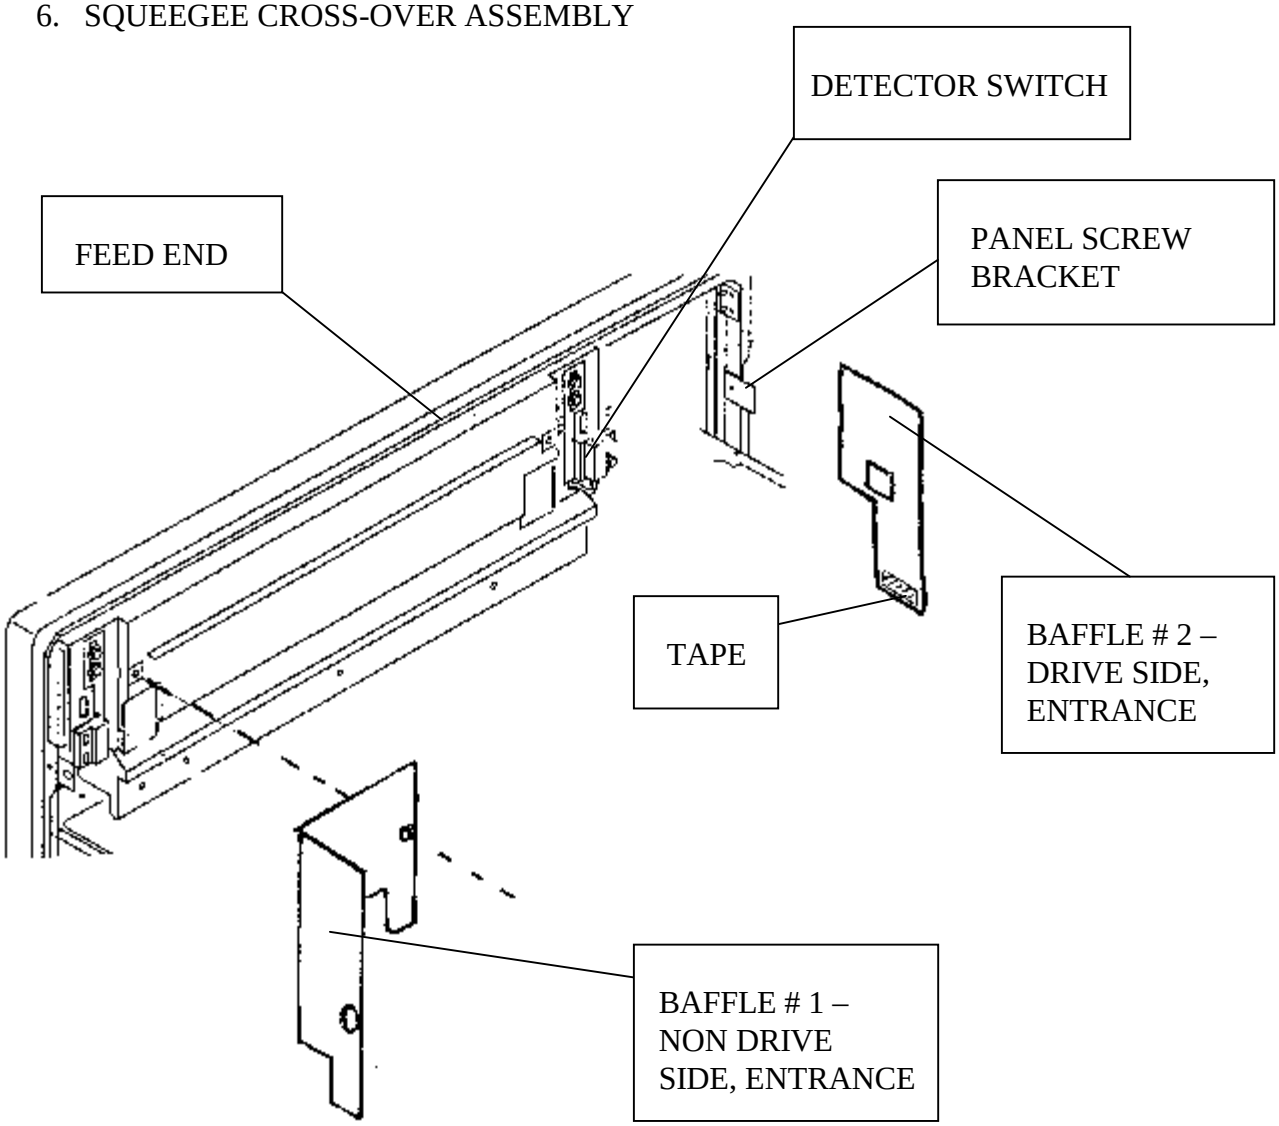

7. Install BAFFLE # 1 - NON DRIVE SIDE, ENTRANCE, behind the PANEL SCREW BRACKET for the NON-DRIVE SIDE PANEL. Attach BAFFLE # 1 to the ACCUMULATOR BOARD HOUSING using existing mounting screw.

8. Install BAFFLE # 2 – DRIVE SIDE, ENTRANCE, behind the PANEL SCREW BRACKET for the DRIVE SIDE PANEL, and below the DETECTOR SWITCH. Attach with double-sided TAPE, provided.

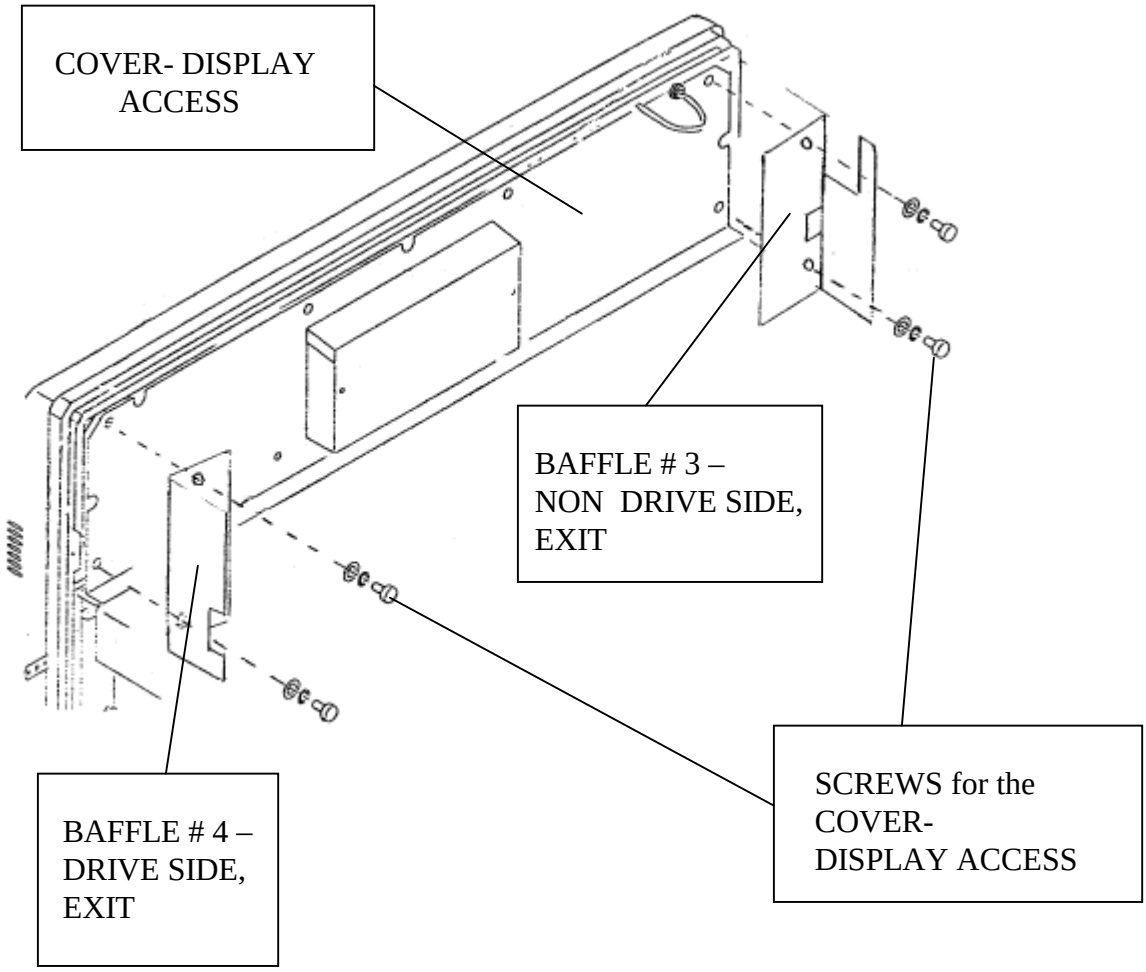

9. Remove (2) SCREWS for the COVER-DISPLAY ACCESS, on the non-drive side.

10. Install BAFFLE # 3 – NON DRIVE SIDE, EXIT, using the (2) SCREWS removed in Step # 9.

11. Remove (2) SCREWS for the COVER-DISPLAY ACCESS, on the drive side.

12. Install BAFFLE # 4 – DRIVE SIDE, EXIT, using the (2) SCREWS removed in Step # 11.

13. Install:

    14. SQUEEGEE CROSS-OVER ASSEMBLY.
    15. New TOP COVER – BLACK (underside painted)

16. Reassemble the PROCESSOR.

17. Energize the PROCESSOR and check for correct operation.

This page is intentionally blank.

Publication History

Publication Date	Publication No.	ECO No.	Changed Pages	File Name	Notes
14 AUG 03	1F8483	2649-236	--------	5K Light Leak Kit.doc	New Publication

Kodak and X-Omat **are trademarks.**

Printed in the U.S.A.
EASTMAN KODAK COMPANY
Rochester NY 14650

HEALTH IMAGING